



1. Push visor up into fully open position. 2. Put finger into **A** Pull down until **B** pops out.



3. Once **B** is out of housing pull visor forward moving **C** out of locating socket in mechanism.



4. To replace. Push **C** into locating hole in mechanism. Then pull down on **A** to locate Part **B**. into housing.  
5. Release **A**. rotate the visor up and down to make sure you have the parts in the correct position, the Visor will fit snugly on the seals if fitted correctly.